

 
# HEAT PURE 1500

## INFRARED ZONE HEATING SYSTEM

OWNER'S MANUAL

Model No. **ATI-HP-XP**

[www.advancedtechinfrared.com](http://www.advancedtechinfrared.com)

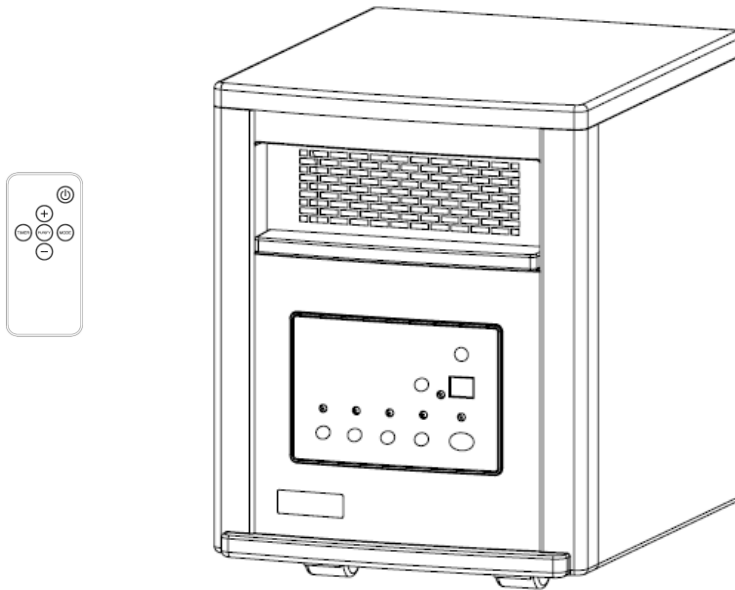

**PLEASE SAVE THESE INSTRUCTIONS**

**WARNING: READ THIS OWNER'S MANUAL CAREFULLY BEFORE USE.**

---

Thank you for choosing the Heat Pure 1500 Infrared Zone Heating System. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

---

## **IMPORTANT INSTRUCTIONS**

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 16 AWG minimum size and rated not less than 1500W.
14. To avoid fire or shock hazard, plug the unit directly into a 115 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.

16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. DO NOT use outdoors.
20. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
22. Connect to properly grounded outlets only.
23. Save these instructions.

---

## SPECIFICATIONS

Voltage Rating	120 V (60Hz)
Power Consumption	1000/1500W
Unit Size	13.1 in. (W) x 16.5 in. (D) x 16.7 in. (H)
Unit Weight	22.7 lbs

---

## SAFETY FEATURES

### Tip-Over Safety Feature

This heater is equipped with a tip-over safety feature. Once the heater is tipped over, an internal switch will automatically shut the heater off. Once the heater is restored an upright position, the heater will reset. To continue operation, turn on the heater using the supplied remote control or the control panel on the heater.

### Overheat Safety Feature

This heater is equipped with an overheat safety feature. If the heater's internal components reach a certain temperature that could cause overheating and possible fire, the heater will automatically shut off.

**WARNING:** This heater has a voltage rating of 120 volts. The cord has a plug as shown in A. An adapter as shown in C is available for connecting three-blade grounding-type plugs to two-slot receptacles. The grounding lug extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

 
**DO NOT DEFEAT THE SAFETY PURPOSE OF THE GROUNDED PLUG.**

**WARNING:** It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.


**IN THE BOX**

- INFRARED ZONE HEATING SYSTEM
- REMOTE CONTROL
- REMOTE CONTROL BATTERY
- INSTRUCTION BOOKLET

**PRODUCT DIAGRAM**

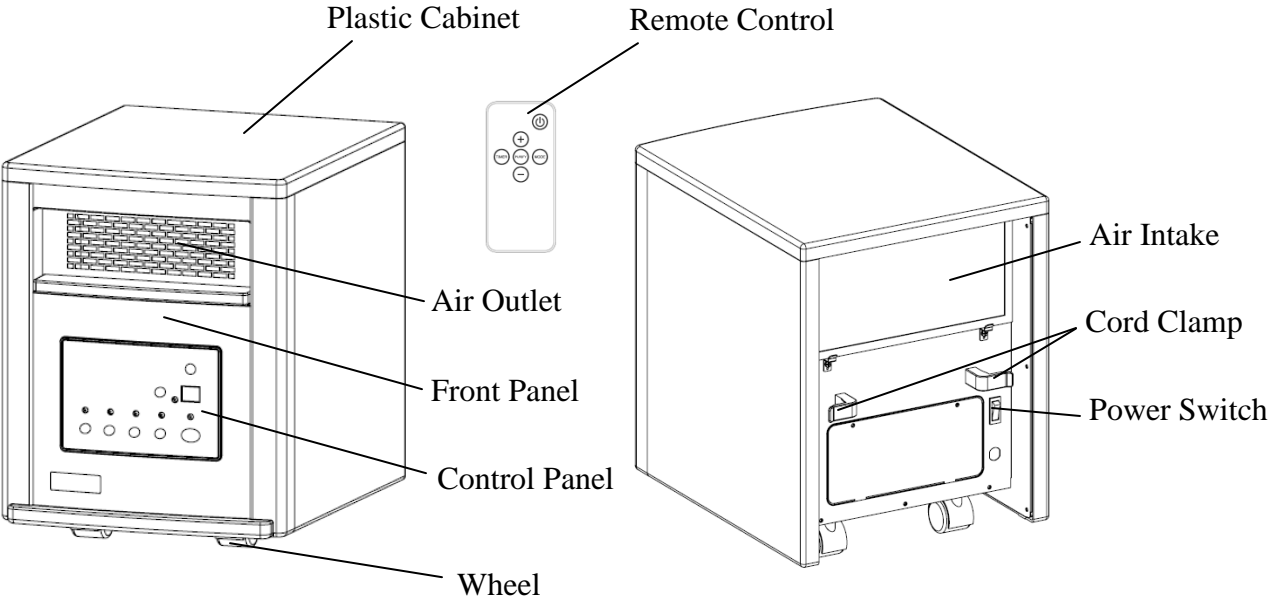


## Control Panel

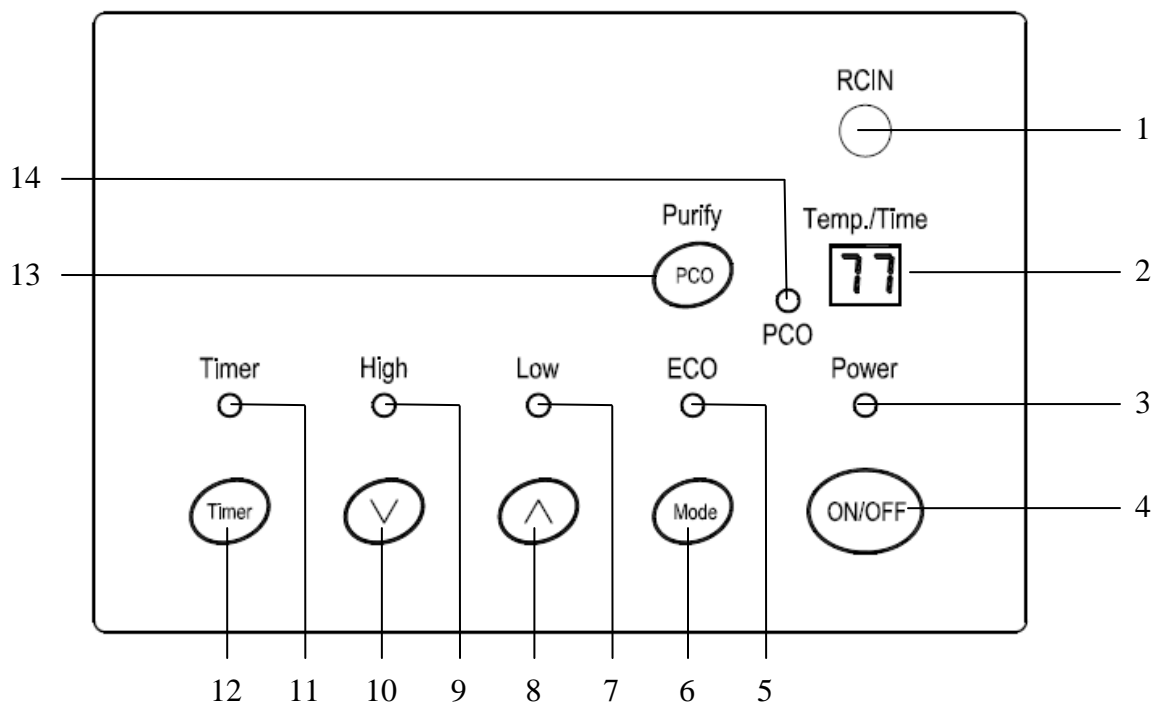 

- 1、 Signal-Receiving Window: Receives the remote control signal.
- 2、 Digital Display: Indicates the set room temperature or time value according to the timer.
- 3、 Power Indication Light: Indicates when the unit connects to a power supply.
- 4、 ON/OFF Switch Button: For power on or off.
- 5、 Energy-Saving Mode: The light is on when the energy-saving mode is active.
- 6、 Mode Button: Select the current running mode.
- 7、 Heat-Down Mode Indication Light: The light is on when heat-down mode is active.
- 8、 Temp Up Button: Moves the setting temp upward.
- 9、 Heat-Up Mode Indication Light: The light is on when heat-up mode is active.
- 10、 Temp Down Button: Moves the setting temp downward.
- 11、 Timer Indication Light: The light is on when the timer is active.
- 12、 Timer Button: Used to set the timer and adjust time value for the timer.
- 13、 Air Purification Button: Used to start or stop the air purifier.
- 14、 Air purification Indicator: The light is on when air purification is active.


## Remote Control

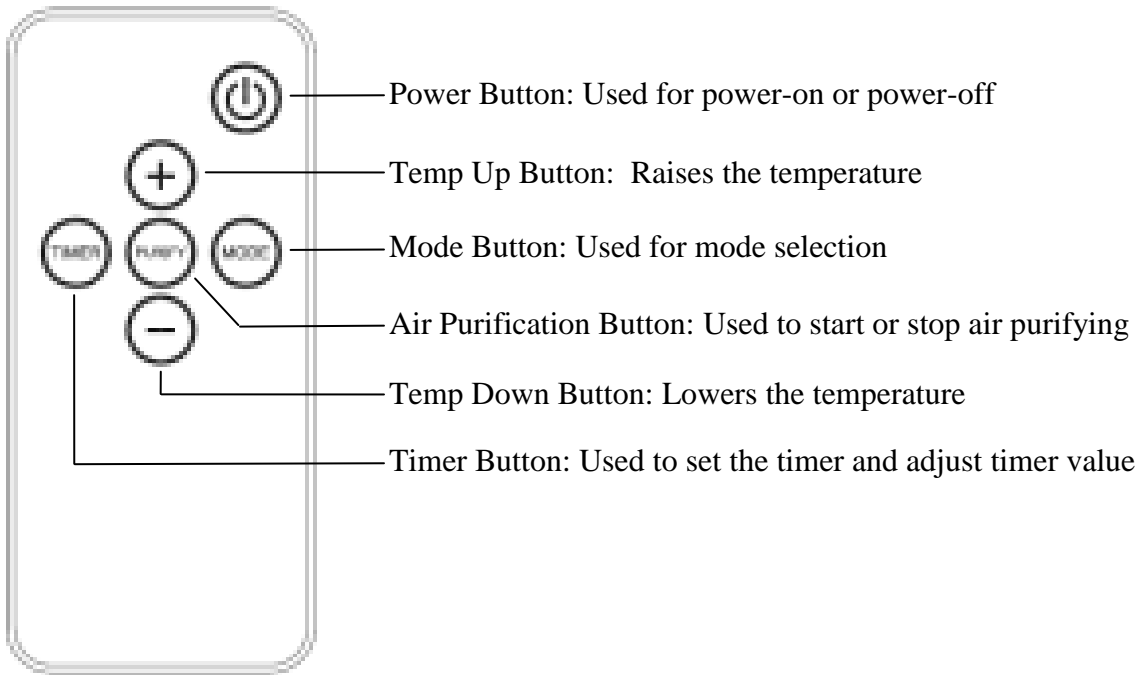 

## PREPARATION



 

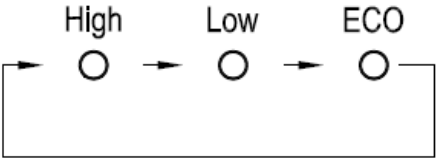
Place the heater on a firm, level surface and plug into a grounded 120V 60Hz power outlet. Turn on the power switch in the rear of the unit. Only operate heater in an upright position with caster wheels attached.

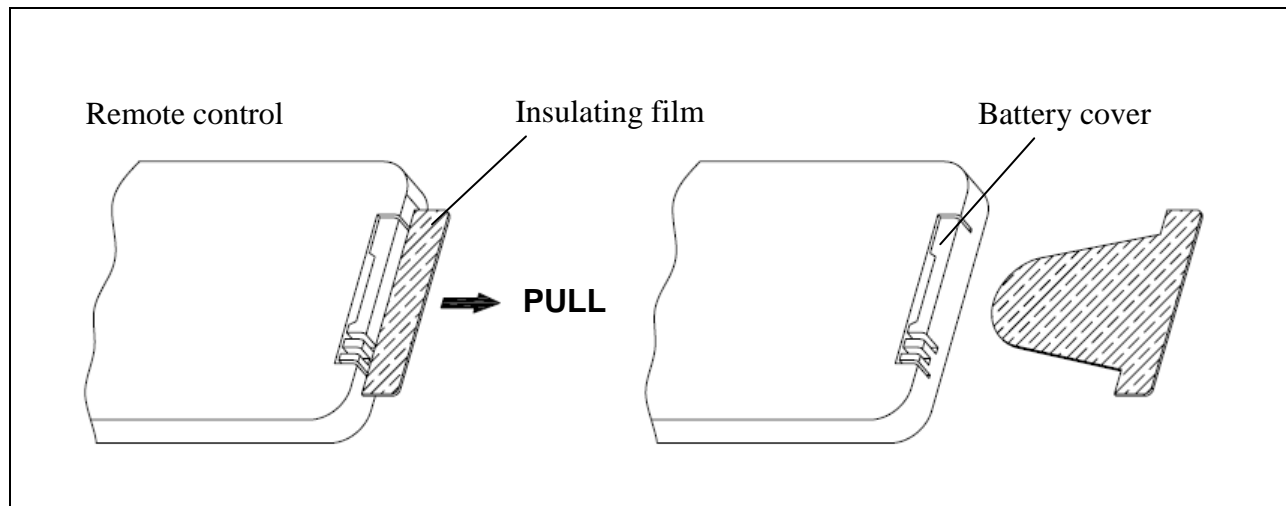When using the remote control, please pull out the insulating film as shown below.





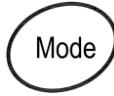


## OPERATING INSTRUCTIONS

### 1、 Start and select working mode




 Or 	<p>Turn the heater on by pressing the ON/OFF button on the control panel or by pressing the Power button on the supplied remote control.</p>
 Or 	<p>Select a heat setting. Press the MODE button to toggle between the three heat settings.</p>
	<p>Power for High setting is 1500W. Low setting is 1000W. ECO mode is an Economic Energy Saving Function. When ECO mode is chosen the heater will consume one-third less power once the room temperature reaches a certain point.</p>

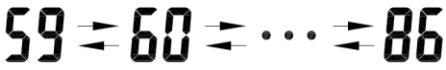

### 2、 Setting room temperature

 Or  Or  Or 	<p>Adjust the thermostat by pressing the arrows on the control panel or remote control.</p>
	<p>Set temperature indication varies from 59°F to 86°F. Once you have chosen the desired temperature, the heater will remain on until the room temperature increases to the temperature on the digital display. The heater will cycle on and off to maintain the desired room temperature.</p>

### 3、 Operate air purification



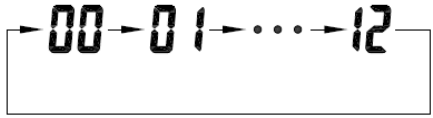

Note: Air purification can be individually started when the heater is OFF.

 Or 	<p>Press the air purification button either on the control panel or the remote control.</p>
	<p>The air purification indicating light means air purifier is active.</p>

 Or 	Press the air purification button again either on the control panel or remote controller to stop the air purification.
--	--



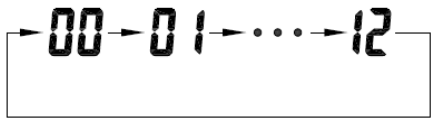

#### 4、 Setting the timer to Power-Off the heater

Attention! ONLY when the power is on, can you set the timer power-off function.

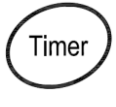 Or 	When starting the unit, press the timer button on the control panel.
	Digital display turns the set temperature to the time value for the timer. Press the timer button more than once, the value will vary from 0 to 12hr (1 hr interval) in circulation.
	The light is on when the timer power-off mode is set.



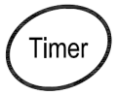

#### 5、 Setting the timer to Power On the heater

Attention! ONLY when the power is off, can you set the timer power-on function.

 Or 	Under power-off, press the timer button on the control panel.
	Digital display indicates the time value for the timer. Press the timer button more than once, the value will vary from 0 to 12hr (1 hr interval) in circulation.
	The light is on when the timer power-on mode is set.

 
#### 5、 Setting electro lock

Function of electro lock can avoid mis-operation from children. Locking can be set in both power-on and power-off modes.


 And 	Press Temp Up and Temp Down buttons once for 3 seconds. Locking is fulfilled when a buzzer rings. When locked, control panel and remote control will fail to function.
 And 	When release is needed, please re-press Temp Up and Temp Down buttons once for 3 seconds. Release is fulfilled when a buzzer rings. Lock indication disappears. Control panel and remote control return to function.


## MAINTENANCE

1. Turn off the power switch in the rear of the unit.
2. Unplug the unit and let it cool completely.
3. To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the unit with a soft cloth.  
**CAUTION: DO NOT** let liquid enter the heater.
4. **DO NOT** use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
5. **DO NOT** immerse the heater in water.
6. Wait until the unit is completely dry before use.
7. The air filter needs to be cleaned every 3 months. Please remove the filter as shown in the following steps. Flush and clean the filter with water, then dry it out and re-install.

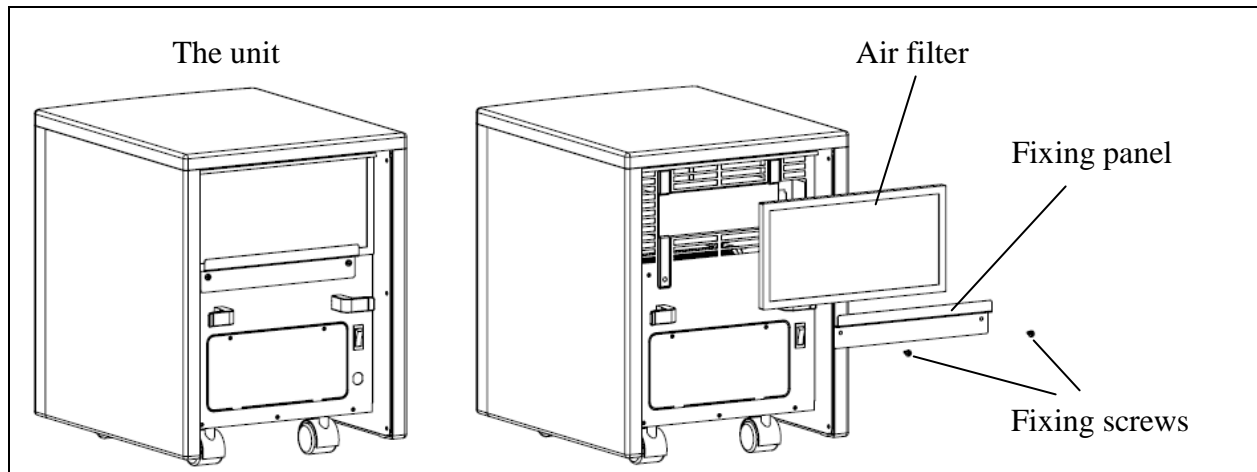

  8. If the unit is not in use for a long time, please take out the battery in the remote control according to following steps, then take care of the remote control.

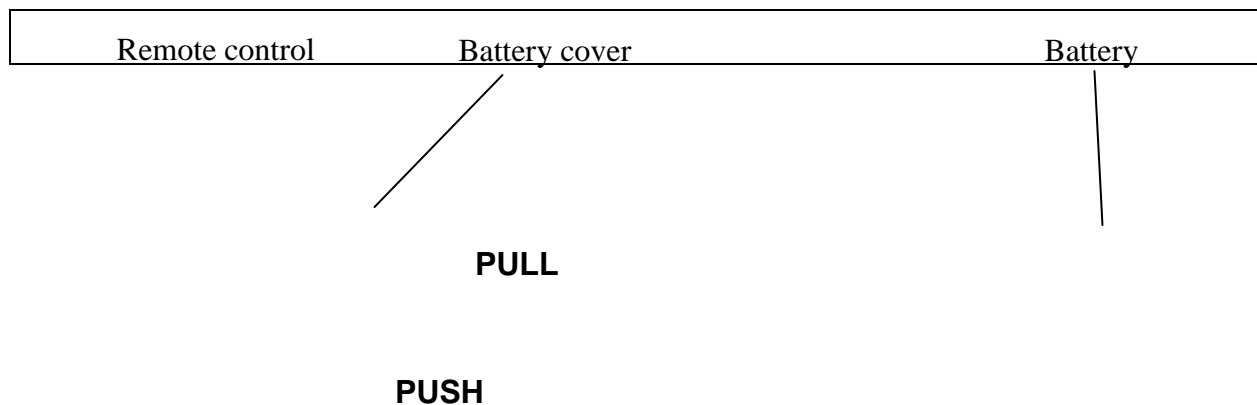

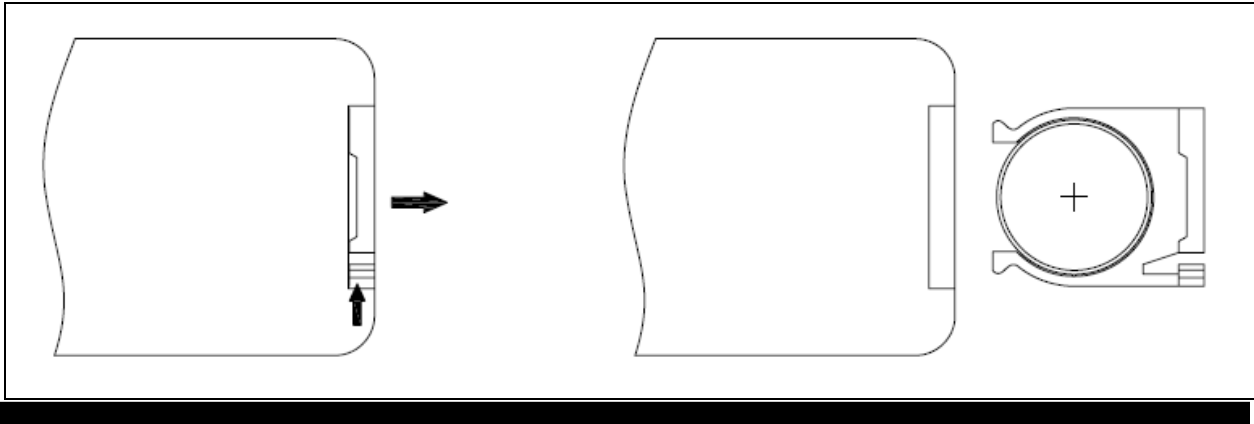

## STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

## TROUBLESHOOTING

If the heater will not operate, please check the following before seeking repair or service:

1. Check if the power cord is plugged into an electrical outlet, if not, plug in.
2. Check if electricity to the main fuse is working.
3. Check if the battery in the remote control is in good use, and that the insulating film is pulled out.

NOTE: The heater may not operate if the thermostat is set higher than the room temperature. To begin operation, increase the thermostat temperature to a higher heat setting.